# Installations- / Monitoring Technique

#### **VARIMETER RCM**

# Residual Current Monitor, Type B for AC and DC Systems RN 5883

# Translation of the original instructions





# **Product Description**

The RN 5883 AC/DC sensitive residual current monitor from the VARIMETER RCM family is used for the early detection of insulation faults and detects residual currents with both DC and AC components in earthed systems (type B). The measurement takes place via an external current transformer.

Contrary to an RCD the residual current monitor RN 5883 does not disconnect the mains when detecting a fault but only indicates it. Besides the easy to read LED chain indicating the actual current several LEDs display operation, pre-alarm and alarm. The 4 measuring ranges cover 10 to 3 A. Additional features are broken wire detection, test function and adjustable pre-alarm.

The residual current monitor RN 5883 provides early information for precise and cost effective maintenance before the plant stops.

#### Your Advantage

- Preventive fire and system protection
- · Increasing the availability of plants by early fault detection
- Universal usage at AC/DC mains
- Protection against manipulation by sealable transparent cover over setting switches

#### **Features**

- According to IEC/EN 62020, VDE 0663
- For AC and DC systems Type B
- · To detect earth faults in grounded voltage systems
- 4 setting ranges from 10 mA to 3 A
- Manual reset, with alarm and pre-warning
- · With adjustable switching delay
- Energized or de-energized on trip
- · LED indicator for operation, pre-alarm and alarm
- · With test function
- · LED-chain indicates fault current
- · As option with analogue output
- Broken wire detection
- Width: 52.5 mm

#### **Approvals and Markings**




1) RN 5883 Variant /61; 2) ND 5015

#### **Application**

The residual current monitor type B is designed to monitor DC systems and AC systems up to 250 Hz.

#### **Circuit Diagram**

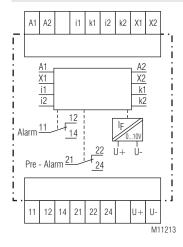

#### Indication

Green LED "ON": On, when auxiliary supply connected

Yellow LED "Pre-Alarm": Flashes during time delay t

On, when pre-alarm active

Red LED "Alarm": Flashes during time delay t

On, when alarm active

Yellow and red LED: Flashes on broken wire or extremely high input

signal

Yellow LED-chain: LED chain indicates fault current in % of adjusted

alarm value

#### **Connection Terminals**

Terminal designation	Signal description
A1, A2	Auxiliary voltage U <sub>H</sub>
i1, k1, i2, k2	Connection of an external residual current transformer
X1, X2	Parameterization input energized or de-energized on trip
11, 12, 14	Contacts alarm signal
21, 22, 24	Contacts pre-alarm signal
U-, U+	Analogue output (option)


#### Notes

The devices measure AC and DC current (AC / DC sensitive). Due to the measurement principle they also detect magnetic fields in the next to the current transformer.

When planning a panel with AC/DC sensitive residual current monitors please make sure that no components are placed next to the CT that create a magnetic field, e.g. contactors, transformers etc.

If an influence is detected, also a rotation of the CT by 90  $^{\circ}\text{C}$  could positively reduce the influence.

#### Set-up and Adjustment Facilities

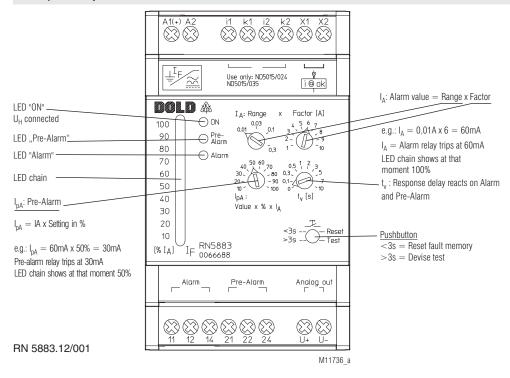

It is of advantage to keep the range small and the Factor high. Example: Setting 300 mA: Range 0,1 x Factor 3 = 300 mA

#### **Function**

The Measuring circuit includes an external residual current transformer. All conductors of a voltage system are fed through the transformer except the ground wire. In a healthy system the sum of all flowing currents is zero, so that no voltage is induced in the CT. If an earth fault occurs, sourcing a current flowing to ground, the current difference induces a current in the CT that is detected by the RN 5883.

If an earth fault occurs, sourcing a current flowing to ground, the current difference induces a current in the CT that is detected by the RP 5883.

On broken sensor wires and broken CT coils the unit goes into alarm state and the LEDs for pre-alarm (yellow) and alarm (red) flashes.

The unit has 2 changeover output contacts. One for alarm 11, 12, 14 and 21, 22, 24 and one for pre-alarm.

4 Setting Ranges can be slected from 10 mA to 3 A. The fine adjustment is made via potentiometer "Factor"

Measuring range = Range x Factor.

The alarm relay switches at 100 % of the adjusted response value.

The pre-alarm can be set in 10% steps between 10 and 100% of the alarm value.

Potentiometer  $t_{_{\nu}}$  sets the switching delay between 0 and 10 seconds. The delay reacts on pre-alarm and alarm.

The different CT sizes require a correct adaption of the residual current monitor. 3 models are available:

Туре	Suitable residual current transformer	Frequeny range
RN 5883.12/61	ND 5015/024	DC + AC up to 250 Hz
	ND 5015/035	
RN 5883.12/010/61	ND 5015/070	DC + AC up to 180 Hz
	ND 5018/105	
RN 5883.12/020	ND 5018/140	DC + AC up to 60 Hz
	ND 5018/210	

Table 1

An external link on X1-X2 allows the change between energized and de-energized on trip. A change of the function will only be valid after interruption of the supply voltage.

Terminal X1 / X2: External link = De-energized on trip,

Open = Energized on trip

De-energized on trip: In the case of groundfault or missing auxiliary supply

the relays are de-energized,

the NC contacts 11/12; 21/22 are closed In fault free state the relays are energized, the NO contacts 11/14; 21/24 are closed

Energized on trip: In the case of groundfault the relays are energized,

the NO contacts 11/14; 21/24 are closed

In fault free state the relays are de-energized, the NC contacts 11/12; 21/22 are closed

If an adjusted value is reached on the measuring input (alarm or prewarning)at the standard type RN 5883 the signal is stored. Reset is made by pressing the button "Test/Reset" for < 3 s s or by disconnecting the auxiliary supply (approx. 30 s).

If the "Test/Reset" button is pressed for > 3 s, a test of the unit is made. The time delays run, the pre-warning and alarm is activated.

An LED chain shows the fault current between 10 and 100 % of the adjusted alarm value.

An analogue output 0  $\dots$  10 V indicates also the fault current. 10 V corresponds to 100 % of the adjusted alarm value.

2 28.11.23 en / 807A

#### **Technical Data** Input Auxiliary voltage U<sub>1</sub>: DC 12 ... 24 V, AC/DC 24 ... 80 V, AC/DC 80 ... 230 V Voltage range at U<sub>H</sub> = DC 12 ... 24 V: DC 9.6 ... 30 V At U = AC/DC 24 ... 80 V: DC 19 ... 110 V, AC 19 ... 90 V At U<sub>H</sub> = AC/DC 80 ... 230 V: DC 64 ... 300 V. AC 64 ... 265 V Nominal frequency U.: AC 50 / 60 Hz Nominal consumption at AC: 5 VA

At DC: 2.5 W 10 ... 100 mA, 30 ... 300 mA, Measuring range: 100 ... 1000 mA, 300 ... 3000 mA

Measuring range fine adjustment: 1 ... 10

Max. overload: With overload protection Alarm: 100 % of the adjusted measuring range Pre-alarm: 10, 20, 30, 40, 50, 60, 70, 80, 90, 100 %

of the adjusted alarm value Frequency range: DC and AC to 250 Hz\*)

\*) depending on the differential current transformer used. See "Function" Table 1.

Repeat accuracy:  $\leq \pm 0.1 \% / K$ Temperature drift: Reaction time: 300 ms

Switching delay

Pre-alarm / alarm: 0 ... 10 s

Output

Contacts: 1 changeover contact for pre-alarm.

1 changeover contact for alarm

Thermal current I,,

up to 30 °C: 5 A Up to 40 °C 4 A Up to 60 °C: 2 A

**Switching capacity** at AC 15:

3 A / AC 230 V NO contact: IEC/EN 60947-5-1 NC contact: 1 A / AC 230 V IEC/EN 60947-5-1 **Electrical life** 

to AC 15 at 1 A, AC 230 V: Short circuit strength

4 A gG/gL max. fuse rating: IEC/EN 60947-5-1

3 x 105 switch. cycl.

Mechanical life: ≥ 108 switching cycles

**Analogue Output (option)** 

Terminal U+ / U-: 0 ... 10 V; 5 mA variant RN 5883/ 1

Screened wire; screen one end grounded

IEC/EN 60947-5-1

at device to PE

**General Data** 

Operating mode: Continuous Temperature range

Operation: - 40 ... + 60 °C

- 20 ... + 60 °C (variant /\_1\_ and /\_2\_) - 40 ... + 65 °C (variant /004)

- 40 ... + 70 °C

Storage: 93 % at 40 °C Relative air humidity: Altitude:  $\leq$  2000 m

Insulation coordination according to IEC 60664-1: RN 5883 cennected with

current transformer ND 5015, ND 5018

Rated impuls voltage / pollution degree:

Auxiliary voltage / Meas. circuit: 6 kV / 2 Auxiliary voltage / Contacts: 6 kV / 2 Auxiliary voltage / Analoge output: 6 kV / 2 Contacts / Analoge output: Meas. circuit / Analoge output: 6 kV / 2

Contacts 11, 12, 14 / 21, 22, 24: 4 kV / 2

**Technical Data** 

**EMC** 

Class 3 (5 kV / 0.5 J) DIN VDE 0435-303 Surge voltages: Electrostatic discharge: IEC/EN 61000-4-2 8 kV (air) HF irradiation 80 MHz ... 2.7 GHz: 20 V / m (class 3) IEC/EN 61000-4-3 10 V (class 3) HF-wire guided: IEC/EN 61000-4-6 Fast transients: 2 kV (class 3) IEC/EN 61000-4-4 Surge voltages: 1 kV (class 3) IEC/EN 61000-4-5

Interference suppression: Degree of protection

Housing: IP 30 (not sealed) IEC/EN 60529

IP 40 (sealed with

Limit value class B

seal wire 50/30) IEC/EN 60529

EN 55011

The unit must be disconnected from the power supply before the seal is applied

IEC/EN 60529 Terminals: IP 20

Housing: Thermoplastic with V0-behaviour

according UL subject 94 Amplitude 0.35 mm

frequency 10 ... 55 Hz IEC/EN 60068-2-6 IEC/EN 60068-1

40 / 60 / 03 Climate resistance: Terminal designation: EN 50005

Wire connection: DIN 46228-1/-2/-3/-4

**Fixed screw terminals** 

Vibration resistance:

0.5 ... 4 mm<sup>2</sup> (AWG 20 - 10) solid or Cross section:

0.5 ... 4 mm<sup>2</sup> (AWG 20 - 10) stranded wire without ferrules 0.5 ... 2.5 mm<sup>2</sup> (AWG 20 - 10) stranded wire with ferrules

6.5 mm Stripping length:

Cross-head screw / M3 box terminals Wire fixing:

Fixing torque: 0.5 Nm DIN rail

Mounting: IEC/EN 60715

Weight: Approx. 160 g

**Dimensions** 

Width x height x depth: 52.5 x 90 x 71 mm

UL-Data RN 5883

These devices only monitor residual currents and are not intended to be used as Ground Fault Circuit Interrupter (GFCI) in accordance with UL1053 / UL943.

These devices have been investigated to be used with external differential current transformers manufactured by E. Dold & Söhne GmbH & Co. KG, Cat. Nos. ND5015/024/61, ND5015/035/61 or ND5015/070/61.

Supply voltage U,: AC/DC 24-80V single or double phase

50/60 Hz;

AC/DC 80-230V single or double phase

50/60 Hz

Switching capacity relays

5A, 250Vac G.P. Ambient temperature 30°C:

250 Vac, 2A pilot duty 250 Vac, 1/2hp

4A, 250Vac G.P. Ambient temperature 40°C:

250 Vac, 2A pilot duty 250 Vac, 1/2hp

Ambient temperature 60°C: 2A, 250Vac G.P.

Analogue output

(only at variant/\_\_1): 0 .. 10V, 5mA

Max. measuring frequency: DC, AC (0 - 250Hz)

Wire connection: AWG 20 - 12

60°C / 75°C copper conductors only



Technical data that is not stated in the UL-Data, can be found in the technical data section.

3 28.11.23 en / 807A

#### CCC-Data RN 5883

# Insulation coordination according to IEC 60664-1:

RN 5883 cennected with

current transformer ND 5015, ND 5018

Rated impuls voltage / pollution degree:

Auxiliary voltage / Meas. circuit: 4 kV / 2
Auxiliary voltage / Contacts: 4 kV / 2
Auxiliary voltage / Analoge output: 4 kV / 2
Contacts / Analoge output: 4 kV / 2
Meas. circuit / Analoge output: 4 kV / 2
Contacts 11,12,14 / 21, 22, 24: 4 kV / 2

# **Standard Type**

RN 5883.12/61 AC/DC 80 ... 230 V 50 / 60 Hz

Article number: 0066451

For residual current transformer ND 5015/024 and ND 5018/035

Alarm und Pre-alarm

· Energized or de-energized on trip

· Without analogue output

Auxiliary voltage U<sub>H</sub>: AC/DC 80 ... 230 V

• Width: 52.5 mm

ND 5015/035/61

 
Article number: 0066841

Residual current transformer for RN 5883

Diameter: 35 mm

#### **Variants**

#### Ordering example for variants



For residual current transformer ND 5015/024 und ND 5015/035:

RN 5883.12/001/61: With analogue output 0 ... 10 V

RN 5883.12/800/61: Fixed values, without analogue output

RN 5883.12/802/61: Fixed values, without analogue output;

with bridge on X1/X2:
- Alarm: Energized on trip
- Pre-alarm: De-energized on trip

Without bridge:

- Alarm: De-energized on trip

- Pre-alarm: Energized on trip

RN 5883.12/004: Pre-alarm message and

Alarm message not storing,

reset time 2 s

For residual current transformer ND 5015/070:

RN 5883.12/011/61: With analogue output 0 ... 10 V

For residual current transformer ND 5018/105, ND 5018/140, ND 5018/100.

ND 5018/210:

RN 5883.12/021: With analogue output 0 ... 10 V

**UL-Daten ND 5015** 


Wire connection: AWG 24 - 16


60°C / 75°C copper conductors only

Technical data that is not stated in the UL-Data, can be found in the technical data section.

#### Accessories

#### Residual Current Monitor ND 5015/024, ND 5015/035

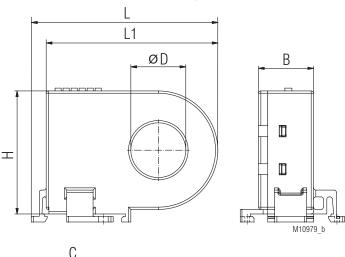

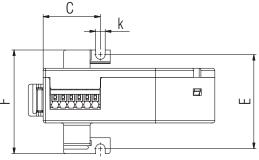

For DIN rail mounting or screw mounting

ND 5015/024	øD	L	L1	В	Н	С	Е	F	k
Dimensions/mm	24	82	75	24	54	25	42*	46	4.2
Weight / g		Approx. 80							
ND 5015/035	øD	L	L1	В	Н	С	Е	F	k
Dimensions/mm	35	88	81	24	67	25	42*	46	4.2
Weight / g	Approx. 90								

<sup>\*)</sup> Drill tolerance for screw mounting:  $\pm$  0.5 mm

## **Technical Data Residual Current Monitor ND 5015, ND 5018**

Ambient temperature:  $-40 \dots +60 \, ^{\circ}\mathrm{C} \, / \, 233 \, \mathrm{K} \dots \, 333 \, \mathrm{K}$  Inflammability class: V0 according to UL94

#### Insulation coordination according to IEC 61869-1

Highest rated operating voltage  $U_m$ : AC 720 V Rated impulse voltage: 3 kV

Length of connection wires Type of wire to CT, e.g.

Single wire:

Single wire twisted pair (pair 1: i1 - k1; pair 2: i2 - k2):

Up to 1 m
Up to 10 m
Up to 10 m
Up to 10 m
Up to 25 m
Up to 3 mm
Up to 4 mm

ND 5015:

Wire fixing: Terminals with spring connection and direct (Push in) technology

Actuation power:

40 N max.

DIN rail mounting:

Integrated clips for vertical and horizontal mounting

Screw fixing: M3 or M4
Fixing torque: Max. 0.8 Nm


ND 5018:

Wire fixing: Flat terminals with self-lifting clamping piece
DIN rail mounting: Using mounting adapter ET 5018
Screw fastening: (only at ND 5018/105, ND 5018/140, ND 5018/210) M 5


28.11.23 en / 807A

## **Residual Current Monitor ND 5015/070**

# ØD 王

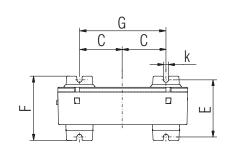

# Residual Current Monitor ND 5018/105, ND 5018/140, ND 5018/210,

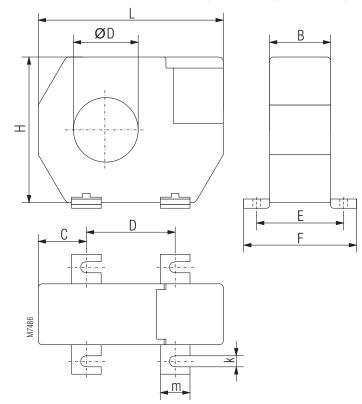

For DIN rail mounting or screw mounting

ND 5015/070	øD	L	Н	H1	В	С	F	k	Е	G
Dimensions/mm	70	111	110	115	32	37	55	4.2	50*	74*
Weight / g	Approx. 220									

<sup>\*)</sup> Drill tolerance for screw mounting: ± 0.5 mm

# For screw mounting

В

M11582\_a

øD	L	В	Н	С	D	Е	F	k	m
105	170	33	146	38	94	46	61	6.5	16
	530								
øD	L	В	Н	С	D	Ε	F	k	m
140	220	33	196	48.5	123	46	61	6.5	16
	1250								
øD	L	В	Н	С	D	Е	F	k	m
210	299	33	284	69	161	46	61	6.5	16
2100									
	105 ØD 140 ØD	105 170  ØD L  140 220  ØD L	105 170 33 ØD L B 140 220 33 ØD L B	105       170       33       146         ØD       L       B       H         140       220       33       196         ØD       L       B       H	## 105     170     33     146     38       ## 60     L     B     H     C       140     220     33     196     48.5       ## 12     12       ## 14     B     H     C       210     299     33     284     69	## 105     170     33     146     38     94       530       ## 140     220     33     196     48.5     123       ## 140     220     33     196     48.5     123       ## 150     1250       ## 161     299     33     284     69     161	## Color of the color of th	105   170   33   146   38   94   46   61	105   170   33   146   38   94   46   61   6.5     530

The residual current transformer ND 5018/105 can also be mounted on DIN-rail. To do this the metal screw fixings have to be removed and have to be replaced by 2 mounting clips (ET5018: Art.no. 0058754; set with 2 pcs)

# Mounting instructions for screw mounting

High forces when mounting may damage the current transformer fixtures. The fixing clips are designed to support the current transformer. Forces that are applied by the cable running through the current transformer can only be tolerated within limitations.

During installation and afterwards please make sure that the wires are


led through the current transformer without applying pressure and remain stable in that position.

 
5


## Accessories

# Disassembling Residual Current Monitor ND 5015/024 and /035


# **Residual Current Monitor ND 5018/105**

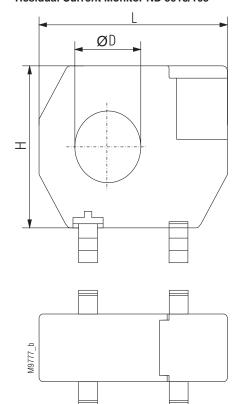



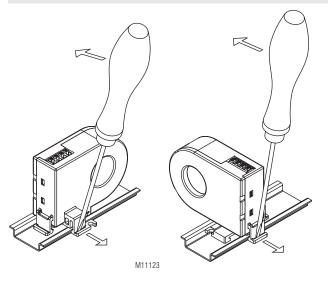

Disassembling Residual Current Monitor ND 5015/070

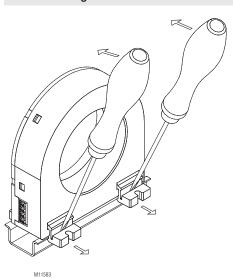

For DIN rail mounting


ND 5018/105	øD	L	В	Н	G
Dimensions/mm	105	170	33	146	55
Weight / g			530		

# Note for accessoires




The listed current transformers are only approved for operation with this unit.


6 28.11.23 en / 807A

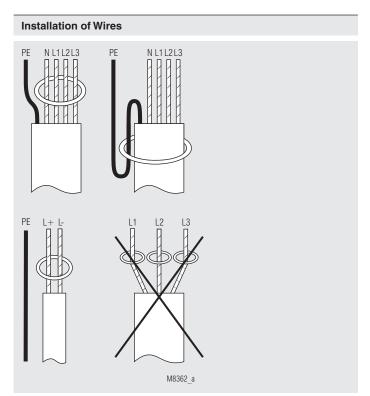

# **Connection Examples**

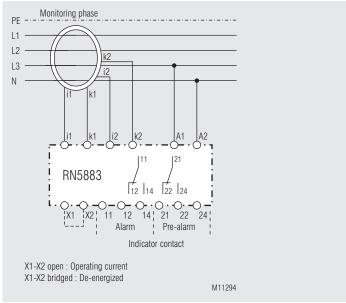

Monitoring of a three-phase network with neutral conductor

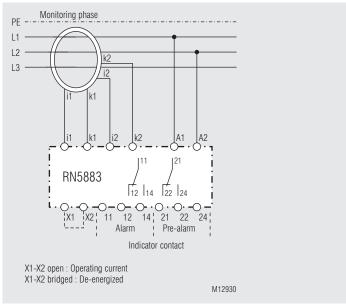

Monitoring of a three-phase network without neutral conductor

28.11.23 en / 807A

E. Dold & Söhne GmbH & Co. KG • D-78120 Furtwangen •	Bregstraße 18 • Phone +49 7723 654-0 • Fax +49 7723 654356

8